


## 6 – Engineer

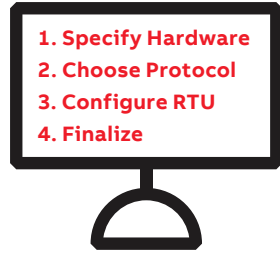

Follow the engineering instructions on the screen.

1. Specify hardware:  
→ Choose 520BID01 R0001.
2. Choose protocol.
3. Configure RTU.
4. Finalize

→ Activate and restart.

## Contacts

### ABB AG

Power Grid  
 P.O. Box 10 03 51  
 68128 Mannheim, Germany  
 Phone +49 (0) 621 381-3000  
 Fax +49 (0) 621 381-7602  
 rtu-sales-support@de.abb.com  
 abb.com/remote-terminal-units

CATEGORY

## RTU520 Starter Kit. Starter Guide.

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB AG does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.


We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB AG.

Copyright © 2018 ABB  
 All rights reserved

9AKK106713A4017 EN2067.07




## 1 – Unpack & Power

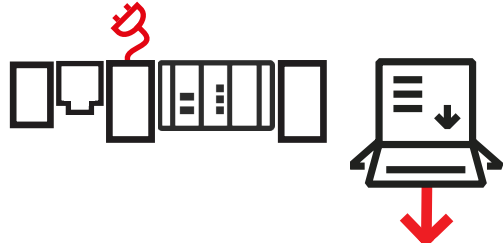

1. Open device packaging and check the scope of delivery:
  - 1x RTU520 Starter Kit
  - 1x USB Stick
  - 1x USB Cable

2. Connect the RTU520 to a grounded socket.


## 2 – Install

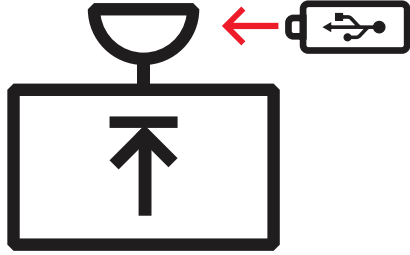

1. Connect the USB stick to your computer and run 'Driver\RTU500seriesUSBSetup.exe'

2. Follow the installation wizard's instructions on the screen to complete driver installation.

Connect the RTU520 to your computer via the USB cable.

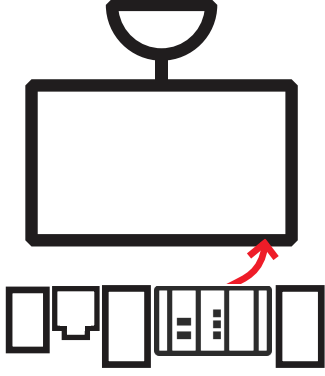

## 4 – Login



1. Start your web browser and enter 'http://169.254.0.10/' into the address bar. Press <Enter> → RTU520 web application starts.

2. Enter your username ('Default') and password ('Default'). Click 'OK'.

## 5 – Start



1. Set your role to 'Engineer'.

2. Click 'Engineering' to start engineering process.